

Super-Micro MXL-RX62H-A DSMX/2

Instructions

How to start the brushed on-board speed controller.

The brushed speed controller is locked when the receiver is power connected, it would be started only when the throttle stick is at lowest position.

When the throttle stick is checked at the lowest position by the receiver at first time, the red LED will flash one time indicating the brushed ESC is unlocked and can work. If the brushed ESC still can't be unlocked or started even the throttle stick is at the lowest position exactly, please check on your transmitter and see if THR channel is reversed or the throttle range is not enough, in this case, please change THR set up and try again.

Binding operation

After powered and 10 seconds of no signal received, receiver will enter binding mode automatically (slow flashing LED light will turn to fast blinking), customer can do bind operation according to your own transmitter. The fast blinking LED will turn to slow flashing when the binding is successful, and then turn to solid bright when the signal is received.